

# Trendgeek® \* User Manual

## Fingerprint Padlock TG-131

The Declaration of Conformity for this device is under the Internet link: [www.technaxx.de/](http://www.technaxx.de/) (in bottom bar "Konformitätserklärung"). Before using the device the first time, please read the user manual carefully. Service phone No. for technical support: 01805 012643 (14 cent/minute from German fixed-line and 42 cent/minute from mobile networks).

Free Email: [support@technaxx.de](mailto:support@technaxx.de)

Keep this user manual for future reference or product sharing carefully. Do the same with the original accessories for this product. In case of warranty, please contact the dealer or the store where you bought this product.

**Warranty 2 years**


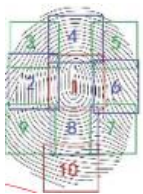
### Features

- The Trendgeek TG-131 is an USB power Fingerprint Padlock.
- Up to 10 different Fingerprints.
- 3,7V Battery with 80mAh 2hour charging time
- up to 2.000 unlockings or 1-year usage time
- Battery Low indicator

### Technical specifications

USB (load in dry condition only)	5V max. 0,2A
Battery	3,7V / 80mAh

### Fingerprint registration

Press one Finger for approximately 5 seconds on the Sensor until blue LED is on	
Press continuously your finger for more than 10 times, different positions, as the image shows until the green light is on. When the green light is on press another finger 10 times until the light is off. <b>At least 2 fingerprints must be registered to arm the lock</b>	

### Fingerprint adding

- After unlocking, press and hold the registered finger for 5 seconds until blue light is on.
- Press a new finger for more than 10 times

## Restore factory settings

- After unlocking, press and hold the registered finger for 20 seconds and release when the red light is on.
- Press the same registered finger when the red light is on. And all the fingerprints are removed after the light changing to green.

## Normal use


- The fingerprint sensor is a sensitive component and should always be kept clean, dry and free from grease to ensure optimal function.
- The finger that touches the sensor should also be clean, dry and free from grease. Finger injuries or skin abrasions may result in the fingerprint affected not being recognised.
- Charging indicator light: The red indicator light is on during charging, and the light is off when it is fully charged.
- After being fully charged, it can stand by for 12 months, and when the power is low, the red-light flashes after unlocking.

## Safety Instructions

- Only recharge with supplied or compatible USB cable.
- This device is not intended for use by children or persons with limited mental capacity or lacking experience and/or lacking expertise.
- This device is not intended for commercial use.
- Any other use or modification of the device is considered improper and involves significant risks. The manufacturer assumes no liability for damages due to improper use.
- Never leave the Trendgeek TG-131 charging unattended.

## WARNINGS & CAUTION:

For adult use only, do not use the device in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide, or near flammable substances, vapors or gases. Do not operate the device near heating openings or in direct sunlight. Keep the device dry. Do not immerse the device in water.

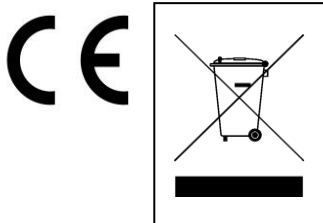

**Hints for Environment Protection:** Packages materials are raw materials and can be recycled. Do not disposal old devices or batteries into the domestic waste. **Cleaning:** Protect the device from contamination and pollution (use a clean drapey). Avoid using rough, coarse-grained materials or solvents/aggressive cleaner. Wipe the cleaned device accurately. **Distributor:** Technaxx Deutschland GmbH & Co.KG, Kruppstr. 105, 60388 Frankfurt a.M., Germany